

Instructions for Installing "The Torque" Screw-In Light Mount

Tools Needed:

- Socket drive bit (included)
- Drill or driver

Step-by-Step Guide:

1. Prepare the Tools:

- Remove the socket drive bit from its packaging.
- Insert the socket drive bit into your drill or driver.

2. Attach the Torque:

- Take "The Torque" out of the packaging.
- Insert "The Torque" into the socket drive bit.

3. Choose the Installation Location:

- Find the desired spot for the light installation.
- **Important:** Make sure there are no underground utilities or irrigation systems in the area.

4. Install The Torque:


- Use your drill/driver to slowly drive "The Torque" into the ground.
- Keep it as vertical as possible during installation.
- **Tip:** If "The Torque" isn't going in straight, reverse it out and try again.

5. Attach the Light Fixture:

- Remove the light adaptor from its packaging.
- Feed the fixture's wire through the light adaptor.
- Screw the light adaptor onto the base of your landscape light fixture.

6. Connect the Wires:

- Thread the wire through the hex nut on "The Torque" and pull it through the side.
- Gently pull the wire as you fit the light adaptor over the hex nut on "The Torque."

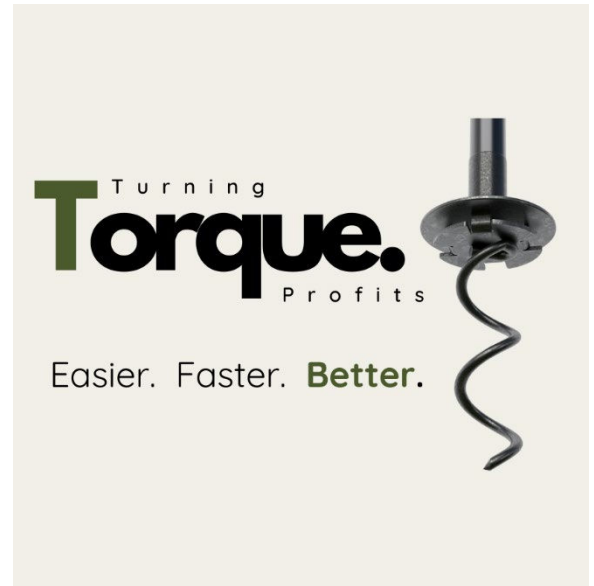

Pro Tip: Double-check that the light is securely attached and upright before completing your installation.

Warnings/Cautions:

When using a drill, use on slow speed to prevent injury to the wrist. The Installer assumes responsibility for their own safety.

Be sure to locate power and gas lines prior to installation.

Please read and follow the instructions.